



How to: Installing a TRACK Trail Mini

A Guide for Partners

Materials

Materials


- **TRACK Trail Mini High Pressure Laminate Sign**
- **Black metal frame**
- **Acrylic brochure holder**
- **4 bolts for sign (1/4 - 20 stainless, buttonhead, 1/2" long)**
- **4 bolts with nuts for brochure holder (5-mm 0.8 x 16-mm bolt, 5-mm x 0.8 nut)**

Tools Needed

- **Allen wrench**
- **Post hole diggers**
- **Concrete (minimum 1 - 60# bag)**
- **Water**

Instructions:

- Place a piece of foam on the ground as a layer of protectent.
- Lay the TRACK Trail Mini Sign Face down on the foam.
- Place the black metal sign frame on top of the sign, lining up the four holes with the four holes on the sign.
- Using the allen wrench, screw in the four bolts to each of the holes.
- **DO NOT** drill through the front of the sign, as this will void the warranty. Do not use power tools.

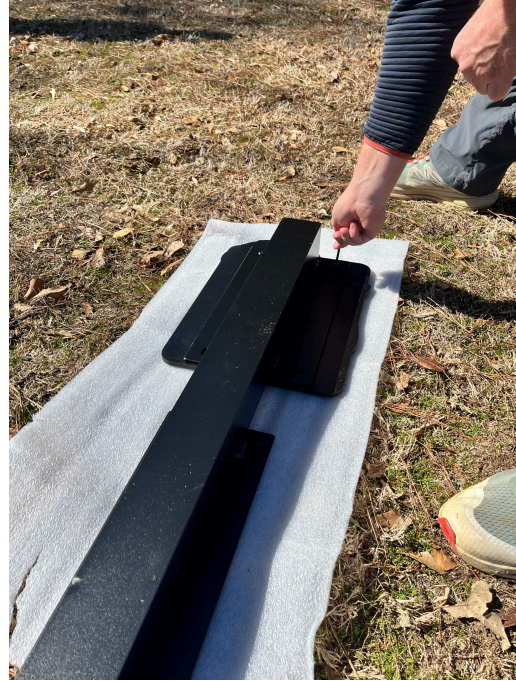

- Next you will need to use the post hole diggers or an auger to dig a hole at least 24 inches deep. The top of the sign should be between 4 and 4.5 feet.



- Place the signpost in the hole.
- Use a level to ensure that the sign is plumb.
- Add the concrete to the hole with a little water.
- Fill the rest of the hole back with dirt.



- Once the sign is in the ground, gather the brochure holder, bolts, and nuts.
- Place the brochure holder on the front of the sign and push the bolts through the holder and signpost, securing on the back with the nuts.



